


RoscoLED® VariColor

4 Channel RF Remote Controller User Guidelines

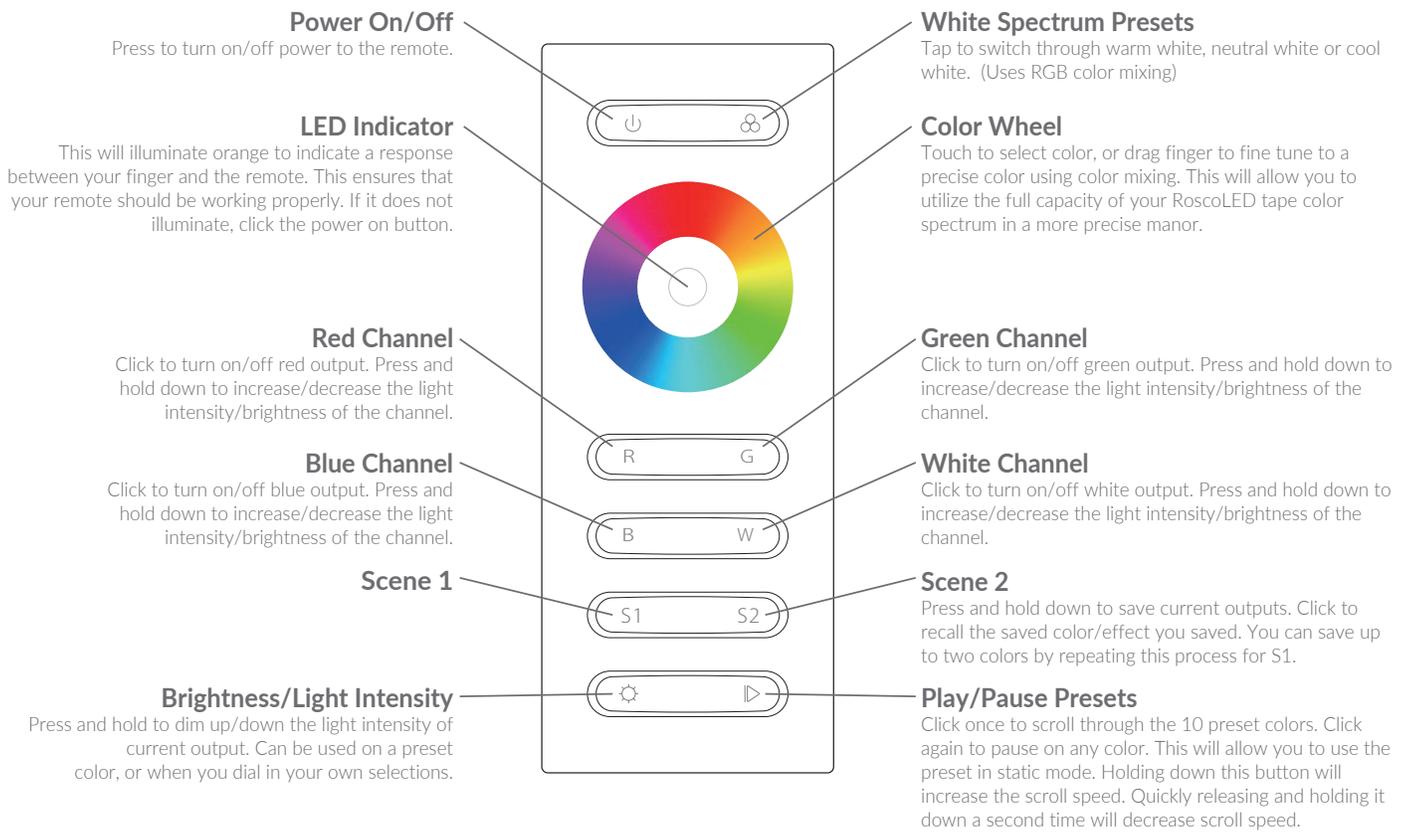

PAIRING RF REMOTE CONTROLLER WITH RECEIVER:

1. Power up RF Remote Controller. Press the RF Code Key on Receiver.
2. Press any button on RF Controller. Connected lights on Receiver will blink once to confirm pairing was successful.
3. To Delete pairing press and hold RF Code Key on Receiver for 3 seconds. Connected lights will flash twice.

Note: One Controller can be paired with up to 10 Receivers.

Wiring Guide for Receiver

