

MIXBOOK™

Quick Start Guide



- 1 Download the myMIX™ app to control MIXBOOK.

iOS



 
Android




- 2 Turn on MIXBOOK.




- 3 Sign into your app and press "No Light Connected" to get started.




- 4 Press SCAN

 

 - 5 Click on MIXBOOK to connect to it. MIXBOOK will not be visible if another device is connected to it. The current user can disconnect by pressing the 3 dots and choosing "Disconnect", or by pressing and holding the MIXBOOK name.



- 6 Click it again to enter live mode.

 

For more information, download the full user manual on our website: WWW.ROSCO.COM See other side for Tips & Tricks ►

Tips & Tricks

- Rename your MIXBOOK by clicking on the 3 dots. By renaming MIXBOOK, you are only changing the name in your app. If another user connects to the same MIXBOOK, their app will show the original MIXBOOK name.



- Please note that effects are not available in MIXBOOK.
- It is always better to fully charge your MIXBOOK before the first usage. Allow it to charge for at least 3 hours the first time.

Key For Indicator Light On The Side Of MIXBOOK:

● No color: MIXBOOK is off	✗ Blinking red quickly = empty battery
■ Steady green: fully charged	✗ Blinking blue = awaiting connection
✗ Blinking red slowly = battery level below 20%	■ Steady blue = connected