AREA 48 COLOR

TOUCH SCREEN OPERATION

VERSION: 0.9.02
DATE: 28/02/19

MAIN MENU

FROM MAIN MENU
YOU CAN PROCEED TO
MANUAL FOR FULL LOCAL
CONTROL ON THE TOUCHSCREEN

MANUAL MENU

FROM MANUAL MENU
YOU CAN PROCEED TO EITHER
CCT MODE
OR FULL CONTROL MODE

MANUAL CCT MODE

IN THE MANUAL CCT MODE
YOU CAN CONTROL THE CCT
FROM 2500K TO 10.000K

MANUAL MENU

FROM MAIN MENU
YOU CAN PROCEED TO
MANUAL FOR FULL LOCAL
CONTROL ON THE TOUCHSCREEN

FULL CONTROL MODE

IN THE FULL CONTROL MODE
YOU CAN CONTROL THE
INDIVIDIUAL LEDS
SIMPLY PRESS THE COLOR
AND MOVE THE FADER

ALL FADERS MENU

IN THE ALL FADERS MENU
YOU CAN CONTROL THE
INDIVIDUAL LEDS
AT THE SAME TIME
WITH MULTI TOUCH

DMX MENU

FROM THE DMX MENU
YOU CAN PROCEED
TO EITHER
FULL CONTROL OR CCT

DMX FULL CONTROL MENU

IN DMX MENU
YOU CAN SET THE DMX ADRESS
AND
CHOOSE BETWEEN 8-BIT and 16-BIT

MODE FULL

IF YOU PRESS THE
MODE FULL BUTTON
YOU WILL GET A FULL LIST
OF THE ACTIVE DMX CHANNELS

DMX MENU

FROM THE DMX MENU
YOU CAN PROCEED
TO EITHER
FULL CONTROL OR CCT

DMX CCT MENU

IN DMX MENU
YOU CAN SET THE DMX ADRESS
AND
CHOOSE BETWEEN 8-BIT and 16-BIT

MODE CCT

IF YOU PRESS THE
MODE CCT BUTTON
YOU WILL GET A FULL LIST
OF THE ACTIVE DMX CHANNELS

SETTINGS MENU

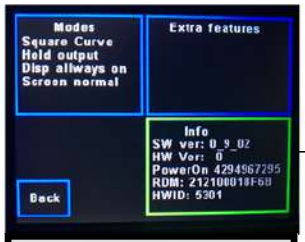

IN THE SETTINGS MENU
YOU CAN SEE INFORMATION
ABOUT YOUR UNIT
AND CONTROL THE
DIFFERENT MODES

MODE MENU PAGE I

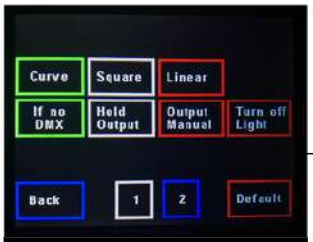

IN THE MODE MENU
ON PAGE I
YOU CAN CONTROL THE CURVE
AND CONTROL WHAT YOUR FIXTURE
WILL DO IF DMX IS LOST

MODE MENU PAGE II

IN THE MODE MENU
ON PAGE II
YOU CAN CONTROL
SCREEN SAVER SETTINGS
AND ROTATE THE TOUCHSCREEN