



VARI*LITE

VL800

EVENTPROFILE


USER MANUAL

1 DESCRIPTION

FEATURES

- High output LED
- Full CMY-CTO color mixing
- Static and rotating gobo wheels, prism, frost, and iris
- Multi-mode fan control
- Adjustable frequency to exceed camera frame rates


Download the product datasheet from the Vari-Lite website at www.vari-lite.com for full technical specifications.

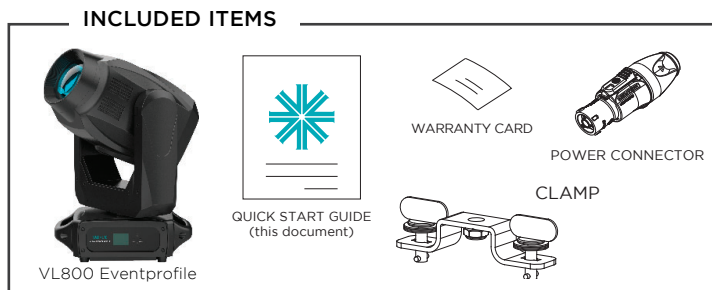

COMPONENTS

LUMINAIRE OVERVIEW

The following illustration shows the external luminaire components and controls.


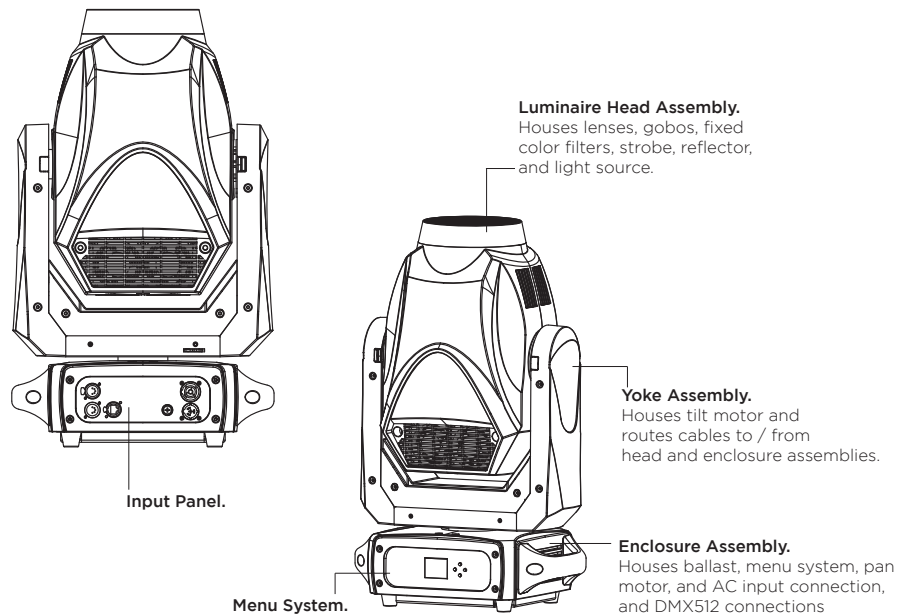


2 INSTALLATION

MOUNTING

The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. Always ensure that the structure to which you are attaching the unit is secure and can support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture. Use M12 screw to fasten the clamp to the Quick-lock fastener.

The equipment must be installed by professionals. And it must be installed at a place where is out of the touch of people and has no one pass by or under it.

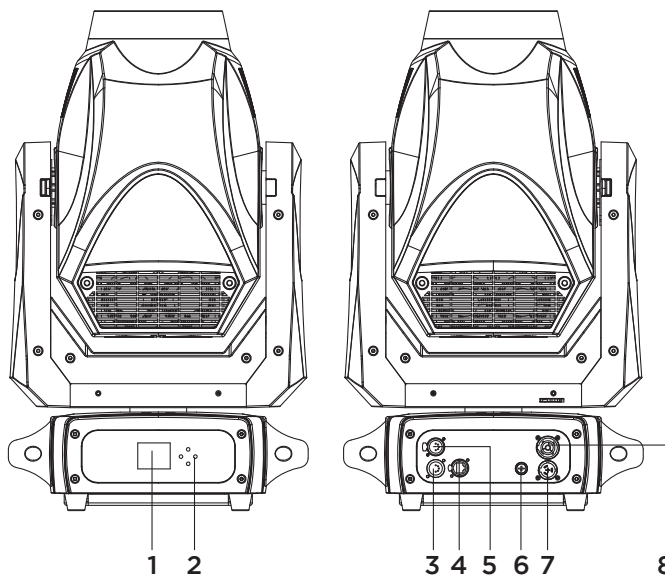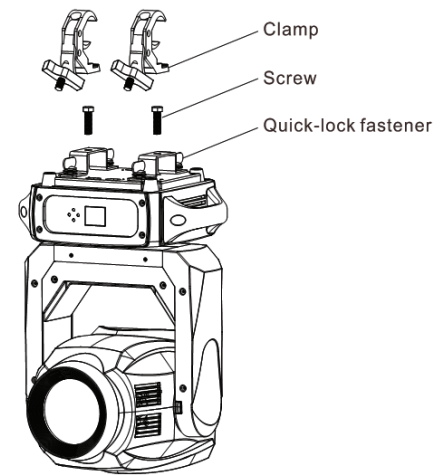

1 Display. Shows menu and selected functions

2 Buttons.

- MENU To select the programming functions
- UP To go backward in the selected functions
- DOWN To go forward in the selected functions
- ENTER To confirm the selected functions

3 DMX/RDM input. Connectors for DMX 512 operation, 5-pin XLR cable to link the DMX console

4 DMX/RDM thru. Connectors for DMX 512 operation, 5-pin XLR cable to link the next unit

5 Ethernet. Transfers fixture's information to a main controller

6 Fuse (T 10A). Protects the unit from damage of overcurrent

7 Power Input. Connects to supply power.

8 Power Thru. Connects to the next fixture.

3 DMX MAPPING

DMX CHANNELS

CHANNEL MAPPING

The following tables assumes a DMX start address of 1. When a different starting address is used, this address becomes channel 1 function and other functions follow in sequence.

TABLE 1.16-BIT ENHANCED

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|----------|-----------------------|----------|---------|--|
| 1 | Intensity High | 0 | 0-65535 | 16-bit control of Dimming |
| 2 | Intensity Low | | | |
| 3 | Pan High | 32767 | 0-65535 | 540° Total Pan Rotation |
| 4 | Pan Low | | | |
| 5 | Tilt High | 32767 | 0-65535 | 270° Total Tilt |
| 6 | Tilt Low | | | |
| 7 | Focus High | 32767 | 0-65535 | Focus control Default value 50% Focus range |
| 8 | Focus Low | | | |
| 9 | Zoom High | 128 | 0-255 | Zoom control Default value 50% zoom range |
| 10 | Cyan | 0 | 0 - 255 | Cyan Color Control 0-100% saturation |
| 11 | Yellow | 0 | 0 - 255 | Yellow Color Control 0-100% saturation |
| 12 | Magenta | 0 | 0 - 255 | Magenta Color Control 0-100% saturation |
| 13 | CTO | 0 | 0 - 255 | CTO Color correction Control 0-100% saturation |
| 14 | Color Wheel | 0 | 0 - 255 | 8-bit control of Color Wheel. (spin speed slow to fast from control channel) OPEN (centered at 0) |
| | | | 0-31 | Open |
| | | | 32-63 | VL RED Centre - 48 |
| | | | 64-95 | Dark Blue Centre - 80 |
| | | | 96-127 | Yellow Centre - 112 |
| | | | 128-159 | Kelly Green Centre - 144 |
| | | | 160-191 | Amber Centre 176 |
| 192-223 | Congo Blue Centre 208 | | | |
| 224-255 | Open | | | |
| 15 | Color Wheel Control | 0 | 0 - 255 | Linear Movement using shortest (quickest) path. Linear Movement using normal (longest) path. Wheel Spin CW (Forward) Wheel Spin STOP Wheel Spin CCW (Reverse) Color Shake Quickest Path (Slow to Fast) For fastest shake set color timing to 0 Color Shake Normal Path (Slow to Fast) For fastest shake set color timing to 0 Reserved Values |
| | | | 0 - 5 | |
| | | | 6 - 10 | |
| | | | 11 - 15 | |
| | | | 16 - 20 | |
| | | | 21 - 25 | |
| | | | 26 - 56 | |
| 57 - 87 | | | | |
| 88 - 255 | | | | |

TABLE 1.16-BIT ENHANCED

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|---|----------|---------------|--|
| 16 | Gobo Wheel 1 | 0 | 0 - 255 | 8-bit control of Gobo Wheel 1. See Channel 20 for control options. Interchangeable glass gobos |
| | | | 0 - 5 | Open - No Gobo |
| | | | 6 - 10 | Gobo 1 (Night Sky) Index |
| | | | 11 - 15 | Gobo 2 (Circle of Ovals) Index |
| | | | 16 - 20 | Gobo 3 (Bricked Out) Index |
| | | | 21 - 25 | Gobo 4 (Neurons) Index |
| | | | 26 - 30 | Gobo 5 (Swirl) Index |
| | | | 31 - 35 | Gobo 6 (Crossed-Bars) Index |
| | | | 36 - 40 | Gobo 7 (On the Rock) Index |
| | | | 41 - 45 | Open - No Gobo |
| | | | 46 - 50 | Gobo 1 (Night Sky) Rotate |
| | | | 51 - 55 | Gobo 2 (Circle of Ovals) Rotate |
| | | | 56 - 60 | Gobo 3 (Bricked Out) Rotate |
| | | | 61 - 65 | Gobo 4 (Neurons) Rotate |
| | | | 66 - 70 | Gobo 5 (Swirl) Rotate |
| | | | 71 - 75 | Gobo 6 (Crossed-Bars) Rotate |
| | | | 76 - 80 | Gobo 7 (On the Rock) Rotate |
| | | | 81 - 85 | Open - No Gobo |
| | | | 86 - 90 | Gobo 1 (Night Sky) Rotate with Mega Stepping |
| | | | 91 - 95 | Gobo 2 (Circle of Ovals) Rotate with Mega Stepping |
| 96 - 100 | Gobo 3 (Bricked Out) Rotate with Mega Stepping | | | |
| 101 - 105 | Gobo 4 (Neurons) Rotate with Mega Stepping | | | |
| 106 - 110 | Gobo 5 (Swirl) Rotate with Mega Stepping | | | |
| 111 - 115 | Gobo 6 (Crossed-Bars) Rotate with Mega Stepping | | | |
| 116 - 120 | Gobo 7 (On the Rock) Rotate with Mega Stepping | | | |
| 121 - 255 | Reserved Values | | | |
| 17 | Gobo 1 Rot/Index High Byte | 32767 | 0 - 65535 | 16-bit control of index and rotation of gobo wheel 1. |
| 18 | Gobo 1 Rot/Index Low Byte | | 0 - 32756 | Rotate Fast to Slow <<< |
| | | | 32757 - 32780 | Rotation STOP |
| | | | 32781 - 65535 | Rotate Slow to Fast >>> |
| 19 | Gobo Wheel 1 Control | 0 | 0 - 255 | Used as a control channel for different movement options for Gobo Wheel 1 (Channel 17) |
| | | | 0 - 5 | Gobo Selection using shortest (quickest) path. |
| | | | 6 - 10 | Gobo Selection using normal (longest) path. |
| | | | 11 - 20 | Reserved Values |
| | | | 21 - 50 | Wheel Spin CW Forward (Fast to Slow) |
| | | | 51 - 60 | Wheel Spin STOP |
| | | | 61 - 90 | Wheel Spin CCW Reverse (Slow to Fast) |
| | | | 91 - 120 | Gobo Shake Quickest Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 121 - 150 | Gobo Shake Normal Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 151 - 180 | Gobo Twist Quickest Path (Slow to Fast) For fastest twist set gobo timing to 0 |
| | | | 181 - 210 | Gobo Twist Normal Path (Slow to Fast) For fastest twist set gobo timing to 0 |
| | | | 211 - 255 | Reserved Values |

TABLE 1.16-BIT ENHANCED

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|------------------------------|----------|---------------|---|
| 20 | Gobo Wheel 2 (Fixed) | 0 | 0-255 | 8-bit control of Gobo Wheel for movement options see channel 22 Single metal stamped wheel |
| | | | 0-25 | Open - No Gobo |
| | | | 26-51 | Gobo 1 (Leafy Breakup) |
| | | | 52-77 | Gobo 2 (Honey Bomb) |
| | | | 78-103 | Gobo 3 Swirl (Radial Breakup) |
| | | | 104-129 | Gobo 4 (Grid) |
| | | | 130-155 | Gobo 5 (Circle of dots) |
| | | | 156-181 | Gobo 6 (Punchcard) |
| | | | 182-207 | Gobo 7 (Vertical bars) |
| | | | 208-233 | Gobo 8 (Medium Circle) |
| 234 - 255 | Open - No Gobo | | | |
| 21 | Gobo Wheel 2 Control | 0 | 0 - 255 | Used as a control channel for different movement options for Gobo Wheel 2 (Channel 21) |
| | | | 0 - 5 | Gobo Selection using shortest (quickest) path. |
| | | | 6 - 10 | Gobo Selection using normal (longest) path. |
| | | | 11 - 20 | Reserved Values |
| | | | 21 - 50 | Wheel Spin CW Forward (Fast to Slow) |
| | | | 51 - 60 | Wheel Spin STOP |
| | | | 61 - 90 | Wheel Spin CCW Reverse (Slow to Fast) |
| | | | 91 - 120 | Gobo Shake Quickest Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 121 - 150 | Gobo Shake Normal Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 151 - 180 | Reserved Values |
| 181 - 210 | Reserved Values | | | |
| 211 - 255 | Reserved Values | | | |
| 22 | Iris | 0 | 0-255 | Iris size control |
| | | | 0 - 200 | Iris beam size open to closed |
| | | | 201 - 255 | Iris pulse slow to fast |
| 23 | Frame 1A | 0 | 0 - 255 | Controls Framing Shutter 1A from Open to Full (DMX 0-255). |
| 24 | Frame 1B | 0 | 0 - 255 | Controls Framing Shutter 1B from Open to Full (DMX 0-255). |
| 25 | Frame 2A | 0 | 0 - 255 | Controls Framing Shutter 2A from Open to Full (DMX 0-255). |
| 26 | Frame 2B | 0 | 0 - 255 | Controls Framing Shutter 2B from Open to Full (DMX 0-255). |
| 27 | Frame 3A | 0 | 0 - 255 | Controls Framing Shutter 3A from Open to Full (DMX 0-255). |
| 28 | Frame 3B | 0 | 0 - 255 | Controls Framing Shutter 3B from Open to Full (DMX 0-255). |
| 29 | Frame 4A | 0 | 0 - 255 | Controls Framing Shutter 4A from Open to Full (DMX 0-255). |
| 30 | Frame 4B | 0 | 0 - 255 | Controls Framing Shutter 4B from Open to Full (DMX 0-255). |
| 31 | Frame Rotate | 128 | 0 - 255 | Controls Framing Shutter mechanism from +/- 90° |
| 32 | Triangular Prism | 0 - 255 | 0 - 255 | Controls Prism mechanism with following values. |
| | | | 0 - 5 | Open |
| | | | 6 - 10 | Index |
| | | | 11 - 15 | Rotate Normal |
| | | | 16 - 20 | Rotate with Mega Stepping |
| 21 - 255 | Reserved Values | | | |
| 33 | Prism Index/Rot High Byte | 32767 | 0 - 65535 | 16-bit control of prism rotation and index. |
| | | | 0 - 32756 | Rotate Fast to Slow <<< |
| 34 | Prism Index/Rot Low Byte | | 32757 - 32780 | Rotation STOP |
| | | | 32781 - 65535 | Rotate Slow to Fast >>> |

TABLE 1.16-BIT ENHANCED

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----|---------------------|----------|---|--|
| 35 | Frost | 0 | 0-255 | Linear control of frost mechanism from out to full in (DMX 0-255) |
| 36 | Strobe Speed | 128 | 0 - 255 | Controls strobe rate from slowest (DMX 0) to fastest (DMX 255) 0.5Hz to 30Hz |
| 37 | Strobe Control | 0 | 0 - 255 0 - 5 6 - 10 11 - 15 16 - 20 21 - 25 26 - 255 | Control Channel for strobing functions. Set discrete value of desired effect Open Closed Normal Strobe Random Strobe Random Sync Reserved Values |
| 38 | Programmers Channel | 0 | 0-40 41 - 45 46 - 50 51 - 55 56 - 60 61 - 65 66 - 70 71 - 75 76 - 80 81 - 85 86 - 90 91 - 95 96 - 100 101 - 105 106 - 110 111 - 115 116 - 120 121 - 125 126 - 130 131 - 135 136 - 140 141 - 145 146 - 150 151 - 155 156 - 160 161 - 165 166 - 170 171 - 175 176 - 255 | Functions do not require 3 second DMX rule. mode will change once DMX level is reached Idle Dimming Curve Linear Dimming Curve S-Curve Dimming Curve Square Curve (Default)** Dimmer Snap On Dimmer Snap Off (Default) Reserved Values Reserved Values Edge Tracking on Edge tracking off (Default) Reserved Values Color Snap off (Default) Color Snap on (de-activates color timing channel) Reserved Values |
| 39 | Focus Timing | 255 | 0 - 255 | Adjustment of fixture timing to control Pan/Tilt mechanisms. See Timing Channel |
| 40 | Optics Timing | 255 | 0 - 255 | Adjustment of fixture timing to control lensing mechanisms. See Timing Channel |
| 41 | Color Timing | 255 | 0 - 255 | Adjustment of fixture timing to control color mechanisms. See Timing Channel |
| 42 | Beam Timing | 255 | 0 - 255 | Adjustment of fixture timing to control beam shaping mechanisms. See Timing Channel |

TABLE 1.16-BIT ENHANCED

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|--|----------|-----------|--|
| 43 | Gobo Timing | 255 | 0 - 255 | Adjustment of fixture timing to control gobo mechanisms. See Timing Channel |
| 44 | Fan Control | 0 | 0 - 255 | Dynamically control fan speed vs LED Output operation. Control values as follows . . . |
| | | | 0-4 | Automatic fan/output adjustment (Default) |
| | | | 05 - 255 | Linear control of fan speed and LED max output* DMX 5 =Highest Constant Fan Speed (Standard mode) DMX 255 = Lowest Constant Fan Speed (Whisper mode) * Standard mode only function is dec-activated if Studio or Boost modes are selected via Dmx or User Interface |
| 45 | Luminaire Control | 0 | 0 - 255 | Control Channel used for full fixture settings lamp controls Set discrete value of desired effect then set value to 0 (Idle). |
| | | | 0 - 5 | Idle (Default) |
| | | | 6 - 10 | Full Luminaire ReCal - Also Used to Wake fixture up from shutdown |
| | | | 11 - 15 | Fixture Shutdown |
| | | | 16 - 20 | Reserved Values |
| | | | 21 - 25 | Display - Menu ON |
| | | | 26 - 30 | Display - Menu OFF |
| | | | 31 - 35 | Reserved Values |
| | | | 36 - 40 | Reserved Values |
| | | | 41 - 45 | Reserved Values |
| | | | 46 - 50 | Reserved Values |
| | | | 51 - 55 | Reserved Values |
| | | | 56 - 60 | Reserved Values |
| | | | 61 - 65 | Reserved Values |
| | | | 66 - 70 | Reserved Values |
| | | | 71 - 75 | Reserved Values |
| | | | 76 - 80 | Display On |
| | | | 81 - 85 | Display Off |
| | | | 86 - 90 | Status Check (Turn UI Screen Green if fixture has no Error - Red if Error) |
| | | | 91 - 95 | Reserved Values |
| | | | 96 - 100 | Reserved Values |
| | | | 101 - 105 | Reserved Values |
| | | | 106 - 110 | Boost Mode - Fixture output increase with Higher fan speed No Fan control (44) |
| | | | 111 - 115 | Standard Mode |
| | | | 116 - 120 | Studio Mode - Reduced output with lower fan settings No Fan control (44) |
| | | | 121 - 125 | Reserved Values |
| 126 - 130 | Reserved Values | | | |
| 131 - 135 | Reserved Values | | | |
| 136 - 140 | Fan On (Default) (Continuous spin rate) | | | |
| 141 - 145 | Fan Auto (Variable spin rate based on LED temperature) | | | |
| 146 - 150 | Reserved Values | | | |

TABLE 1.16-BIT ENHANCED

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----|---------------------------------------|----------|-----------|--------------------------|
| 45 | Luminaire Control <i>continued</i> | 0 | 151 - 155 | ReCal Position |
| | | | 156 - 160 | ReCal Color |
| | | | 161 - 165 | ReCal Beam |
| | | | 166 - 170 | ReCal Optics |
| | | | 171-175 | ReCal Gobo |
| | | | 176 - 180 | Reset fixture to default |
| | | | 181 - 255 | Reserved Values |

TABLE 2. 16-BIT

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|----------|---------------------|----------|---------|--|
| 1 | Intensity High | 0 | 0-65535 | 16-bit control of Dimming |
| 2 | Intensity Low | | | |
| 3 | Pan High | 32767 | 0-65535 | 540° Total Pan Rotation |
| 4 | Pan Low | | | |
| 5 | Tilt High | 32767 | 0-65535 | 270° Total Tilt |
| 6 | Tilt Low | | | |
| 7 | Focus High | 32767 | 0-65535 | Focus control |
| 8 | Focus Low | | | Default value 50% Focus range |
| 9 | Zoom High | 128 | 0-255 | Zoom control Default value 50% zoom range |
| 10 | Cyan | 0 | 0 - 255 | Cyan Color Control 0-100% saturation |
| 11 | Yellow | 0 | 0 - 255 | Yellow Color Control 0-100% saturation |
| 12 | Magenta | 0 | 0 - 255 | Magenta Color Control 0-100% saturation |
| 13 | CTO | 0 | 0 - 255 | CTO Color correction Control 0-100% saturation |
| 14 | Color Wheel | 0 | 0 - 255 | 8-bit control of Color Wheel (spin speed slow to fast from control channel) OPEN (centred at 0) |
| | | | 0-31 | Open |
| | | | 32-63 | VL RED Centre - 48 |
| | | | 64-95 | Dark Blue Centre - 80 |
| | | | 96-127 | Yellow Centre - 112 |
| | | | 128-159 | Kelly Green Centre - 144 |
| | | | 160-191 | Amber Centre 176 |
| | | | 192-223 | Congo Blue Centre 208 |
| 224-255 | Open | | | |
| 15 | Color Wheel Control | 0 | 0 - 255 | Linear Movement using shortest (quickest) path. Linear Movement using normal (longest) path. Wheel Spin CW (Forward) Wheel Spin STOP Wheel Spin CCW (Reverse) Color Shake Quickest Path (Slow to Fast) For fastest shake set color timing to 0 Color Shake Normal Path (Slow to Fast) For fastest shake set color timing to 0 Reserved Values |
| | | | 0 - 5 | |
| | | | 6 - 10 | |
| | | | 11 - 15 | |
| | | | 16 - 20 | |
| | | | 21 - 25 | |
| | | | 26 - 56 | |
| | | | 57 - 87 | |
| 88 - 255 | | | | |

TABLE 2. 16-BIT

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|---|----------|---------------|--|
| 16 | Gobo Wheel 1 | 0 | 0 - 255 | 8-bit control of Gobo Wheel 1. See Channel 20 for control options. Interchangeable glass gobos |
| | | | 0 - 5 | Open - No Gobo |
| | | | 6 - 10 | Gobo 1 (Night Sky) Index |
| | | | 11 - 15 | Gobo 2 (Circle of Ovals) Index |
| | | | 16 - 20 | Gobo 3 (Bricked Out) Index |
| | | | 21 - 25 | Gobo 4 (Nurons) Index |
| | | | 26 - 30 | Gobo 5 (Swirl) Index |
| | | | 31 - 35 | Gobo 6 (Crossed-Bars) Index |
| | | | 36 - 40 | Gobo 7 (On the Rock) Index |
| | | | 41 - 45 | Open - No Gobo |
| | | | 46 - 50 | Gobo 1 (Night Sky) Rotate |
| | | | 51 - 55 | Gobo 2 (Circle of Ovals) Rotate |
| | | | 56 - 60 | Gobo 3 (Bricked Out) Rotate |
| | | | 61 - 65 | Gobo 4 (Nurons) Rotate |
| | | | 66 - 70 | Gobo 5 (Swirl) Rotate |
| | | | 71 - 75 | Gobo 6 (Crossed-Bars) Rotate |
| | | | 76 - 80 | Gobo 7 (On the Rock) Rotate |
| | | | 81 - 85 | Open - No Gobo |
| | | | 86 - 90 | Gobo 1 (Night Sky) Rotate with Mega Stepping |
| | | | 91 - 95 | Gobo 2 (Circle of Ovals) Rotate with Mega Stepping |
| | | | 96 - 100 | Gobo 3 (Bricked Out) Rotate with Mega Stepping |
| 101 - 105 | Gobo 4 (Nurons) Rotate with Mega Stepping | | | |
| 106 - 110 | Gobo 5 (Swirl) Rotate with Mega Stepping | | | |
| 111 - 115 | Gobo 6 (Crossed-Bars) Rotate with Mega Stepping | | | |
| 116 - 120 | Gobo 7 (On the Rock) Rotate with Mega Stepping | | | |
| 121 - 255 | Reserved Values | | | |
| 17 | Gobo 1 Rot/Index High Byte | 32767 | 0 - 65535 | 16-bit control of index and rotation of gobo wheel 1. |
| 18 | Gobo 1 Rot/Index Low Byte | | 0 - 32756 | Rotate Fast to Slow <<< |
| | | | 32757 - 32780 | Rotation STOP |
| | | | 32781 - 65535 | Rotate Slow to Fast >>> |
| 19 | Gobo Wheel 1 Control | 0 | 0 - 255 | Used as a control channel for different movement options for Gobo Wheel 1 (Channel 17) |
| | | | 0 - 5 | Gobo Selection using shortest (quickest) path. |
| | | | 6 - 10 | Gobo Selection using normal (longest) path. |
| | | | 11 - 20 | Reserved Values |
| | | | 21 - 50 | Wheel Spin CW Forward (Fast to Slow) |
| | | | 51 - 60 | Wheel Spin STOP |
| | | | 61 - 90 | Wheel Spin CCW Reverse (Slow to Fast) |
| | | | 91 - 120 | Gobo Shake Quickest Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 121 - 150 | Gobo Shake Normal Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 151 - 180 | Gobo Twist Quickest Path (Slow to Fast) For fastest twist set gobo timing to 0 |
| | | | 181 - 210 | Gobo Twist Normal Path (Slow to Fast) For fastest twist set gobo timing to 0 |
| | | | 211 - 255 | Reserved Values |

TABLE 2. 16-BIT

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|------------------------------|----------|---------------|--|
| 20 | Gobo Wheel 2 (Fixed) | 0 | 0-255 | 8-bit control of Gobo Wheel for movement options see channel 22; Single metal stamped wheel |
| | | | 0-25 | Open - No Gobo |
| | | | 26-51 | Gobo 1 (Leafy Breakup) |
| | | | 52-77 | Gobo 2 (Honey Bomb) |
| | | | 78-103 | Gobo 3 Swirl (Radial Breakup) |
| | | | 104-129 | Gobo 4 (Grid) |
| | | | 130-155 | Gobo 5 (Circle of dots) |
| | | | 156-181 | Gobo 6 (Punchcard) |
| | | | 182-207 | Gobo 7 (Vertical bars) |
| | | | 208-233 | Gobo 8 (Medium Circle) |
| 234 - 255 | Open - No Gobo | | | |
| 21 | Gobo Wheel 2 Control | 0 | 0 - 255 | Used as a control channel for different movement options for Gobo Wheel 2 (Channel 21) |
| | | | 0 - 5 | Gobo Selection using shortest (quickest) path. |
| | | | 6 - 10 | Gobo Selection using normal (longest) path. |
| | | | 11 - 20 | Reserved Values |
| | | | 21 - 50 | Wheel Spin CW Forward (Fast to Slow) |
| | | | 51 - 60 | Wheel Spin STOP |
| | | | 61 - 90 | Wheel Spin CCW Reverse (Slow to Fast) |
| | | | 91 - 120 | Gobo Shake Quickest Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 121 - 150 | Gobo Shake Normal Path (Slow to Fast) For fastest shake set gobo timing to 0 |
| | | | 151 - 180 | Reserved Values |
| 181 - 210 | Reserved Values | | | |
| 211 - 255 | Reserved Values | | | |
| 22 | Iris | 0 | 0-255 | Iris size control |
| | | | 0 - 200 | Iris beam size open to closed |
| | | | 201 - 255 | Iris pulse slow to fast |
| 23 | Frame 1A | 0 | 0 - 255 | Controls Framing Shutter 1A from Open to Full (DMX 0-255). |
| 24 | Frame 1B | 0 | 0 - 255 | Controls Framing Shutter 1B from Open to Full (DMX 0-255). |
| 25 | Frame 2A | 0 | 0 - 255 | Controls Framing Shutter 2A from Open to Full (DMX 0-255). |
| 26 | Frame 2B | 0 | 0 - 255 | Controls Framing Shutter 2B from Open to Full (DMX 0-255). |
| 27 | Frame 3A | 0 | 0 - 255 | Controls Framing Shutter 3A from Open to Full (DMX 0-255). |
| 28 | Frame 3B | 0 | 0 - 255 | Controls Framing Shutter 3B from Open to Full (DMX 0-255). |
| 29 | Frame 4A | 0 | 0 - 255 | Controls Framing Shutter 4A from Open to Full (DMX 0-255). |
| 30 | Frame 4B | 0 | 0 - 255 | Controls Framing Shutter 4B from Open to Full (DMX 0-255). |
| 31 | Frame Rotate | 128 | 0 - 255 | Controls Framing Shutter mechanism from +/- 90° |
| 32 | Triangular Prism | 0 - 255 | 0 - 255 | Controls Prism mechanism with following values. |
| | | | 0 - 5 | Open |
| | | | 6 - 10 | Index |
| | | | 11 - 15 | Rotate Normal |
| | | | 16 - 20 | Rotate with Mega Stepping |
| 21 - 255 | Reserved Values | | | |
| 33 | Prism Index/Rot High Byte | 32767 | 0 - 65535 | 16-bit control of prism rotation and index. |
| | | | 0 - 32756 | Rotate Fast to Slow <<< |
| 34 | Prism Index/Rot Low Byte | | 32757 - 32780 | Rotation STOP |
| | | | 32781 - 65535 | Rotate Slow to Fast >>> |

TABLE 2. 16-BIT

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----|---------------------|----------|---|--|
| 35 | Frost | 0 | 0-255 | Linear control of frost mechanism from out to full in (DMX 0- 255) |
| 36 | Strobe Speed | 128 | 0 - 255 | Controls strobe rate from slowest to fastest (DMX 0-255) 0.5Hz to 30Hz |
| 37 | Strobe Control | 0 | 0 - 255 0 - 5 6 - 10 11 - 15 16 - 20 21 - 25 26 - 255 | Control Channel for strobing functions. Set discrete value of desired effect Open Closed Normal Strobe Random Strobe Random Sync Reserved Values |
| 38 | Programmers Channel | 0 | 0-40 41 - 45 46 - 50 51 - 55 56 - 60 61 - 65 66 - 70 71 - 75 76 - 80 81 - 85 86 - 90 91 - 95 96 - 100 101 - 105 106 - 110 111 - 115 116 - 120 121 - 125 126 - 130 131 - 135 136 - 140 141 - 145 146 - 150 151 - 155 156 - 160 161 - 165 166 - 170 171 - 175 176 - 255 | Functions do not require 3 second DMX rule. mode will change once DMX level is reached Idle Dimming Curve Linear Dimming Curve S-Curve Dimming Curve Square Curve (Default)** Dimmer Snap On Dimmer Snap Off (Default) Reserved Values Reserved Values Edge Tracking on Edge tracking off (Default) Reserved Values Color Snap off (Default) Color Snap on (de-activates color timing channel) Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values Reserved Values |
| 39 | Fan Control | 0 | 0 - 255 0-4 05 - 255 | Dynamically control fan speed vs LED Output operation. Control values as follows . . . Automatic fan/output adjustment (Default) Linear control of fan speed and LED max output* DMX 5 =Highest Constant Fan Speed (Standard mode) DMX 255 = Lowest Constant Fan Speed (Whisper mode) * Standard mode only function is dec-activated if Studio or Boost modes are selected via Dmx or User Interface |

TABLE 2. 16-BIT

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|--|----------|-----------|--|
| 40 | Luminaire Control | 0 | 0 - 255 | Control Channel used for full fixture settings lamp controls. Set discrete value of desired effect then set value to 0 (Idle). |
| | | | 0 - 5 | Idle (Default) |
| | | | 6 - 10 | Full Luminaire ReCal - Also Used to Wake fixture up from shutdown |
| | | | 11 - 15 | Fixture Shutdown |
| | | | 16 - 20 | Reserved Values |
| | | | 21 - 25 | Display - Menu ON |
| | | | 26 - 30 | Display - Menu OFF |
| | | | 31 - 35 | Reserved Values |
| | | | 36 - 40 | Reserved Values |
| | | | 41 - 45 | Reserved Values |
| | | | 46 - 50 | Reserved Values |
| | | | 51 - 55 | Reserved Values |
| | | | 56 - 60 | Reserved Values |
| | | | 61 - 65 | Reserved Values |
| | | | 66 - 70 | Reserved Values |
| | | | 71 - 75 | Reserved Values |
| | | | 76 - 80 | Display On |
| | | | 81 - 85 | Display Off |
| | | | 86 - 90 | Status Check (Turn UI Screen Green if fixture has no Error - Red if Error) |
| | | | 91 - 95 | Reserved Values |
| | | | 96 - 100 | Reserved Values |
| | | | 101 - 105 | Reserved Values |
| | | | 106 - 110 | Boost Mode - Fixture output increase with Higher fan speed No Fan control (44) |
| | | | 111 - 115 | Standard Mode - |
| | | | 116 - 120 | Studio Mode - Reduced output with lower fan settings No Fan control (44) |
| | | | 121 - 125 | Reserved Values |
| | | | 126 - 130 | Reserved Values |
| | | | 131 - 135 | Reserved Values |
| 136 - 140 | Fan On (Default) (Continuous spin rate) | | | |
| 141 - 145 | Fan Auto (Variable spin rate based on LED temperature) | | | |
| 146 - 150 | Reserved Values | | | |
| 151 - 155 | ReCal Position | | | |
| 156 - 160 | ReCal Color | | | |
| 161 - 165 | ReCal Beam | | | |
| 166 - 170 | ReCal Optics | | | |
| 171-175 | ReCal Gobo | | | |
| 176 - 180 | Reset fixture to default | | | |
| 181 - 255 | Reserved Values | | | |

TABLE 3. CLONE

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----|----------------|----------|--|---|
| 1 | Intensity High | 0 | 0-65535 | 16-bit control of Dimming |
| 2 | Intensity Low | | | |
| 3 | Pan High | 32767 | 0-65535 | 540° Total Pan Rotation |
| 4 | Pan Low | | | |
| 5 | Tilt High | 32767 | 0-65535 | 270° Total Tilt |
| 6 | Tilt Low | | | |
| 7 | Focus High | 32767 | 0-65535 | Focus control Default value 50% Focus range |
| 8 | Focus Low | | | |
| 9 | Zoom High | 128 | 0-255 | Zoom control Default value 50% zoom range |
| 10 | Cyan | 0 | 0 - 255 | Cyan Color Control 0-100% saturation |
| 11 | Yellow | 0 | 0 - 255 | Yellow Color Control 0-100% saturation |
| 12 | Magenta | 0 | 0 - 255 | Magenta Color Control 0-100% saturation |
| 13 | CTO | 0 | 0 - 255 | CTO Color correction Control 0-100% saturation |
| 14 | Color Wheel | 0 | 0 - 255 0-5 6-11 12-17 18-23 24-29 30-35 36-41 42-47 48-68 69-89 90-110 111-131 132-152 153-173 174-179 180-211 212-217 218-249 250-255 | Color Wheel. Open Centered Color VL RED Center-9 Centered Color Dark Blue Center-15 Centered Color Yellow Center-21 Centered Color Kelly Green Center-27 Centered Color Amber Center-33 Centered Color Congo Blue Center-39 Variable position Open Center-45 Variable position VL RED Center-58 Variable position Dark Blue Center-79 Variable position Yellow Center-100 Variable position Kelly Green Center-121 Variable position Amber Center-142 Variable position Congo Blue Center-163 Variable position Open Center-177 Variable position Color Rotate Clockwise S>>>>>>>F Center-196 Variable position Stop no Rotation Center-215 Variable position Color Rotate Counter Clockwise S<<<<<<<<F Center-234 Variable position Open Center-253 |
| 15 | Gobo Wheel 1 | 0 | 0-3 4-7 8-11 12-15 16-19 20-23 24-27 28-31 32-35 36-39 40-43 | 8-bit control of Gobo Wheel 1. See Channel 20 for control options. Index Open - No Gobo Gobo 1 (Night Sky) Index Gobo 2 (Circle of Ovals) Index Gobo 3 (Bricked Out) Index Gobo 4 (Nurons) Index Gobo 5 (Swirl) Index Gobo 6 (Crossed Bars) Index Gobo 7 (On the Rock) Index Open - No Gobo Gobo 1 (Night Sky) Rotate Gobo 2 (Circle of Ovals) Rotate |

TABLE 3. CLONE

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|---|----------|---------------|---|
| 15 | Gobo Wheel 1 <i>continued</i> | 0 | 44-47 | Gobo 3 (Bricked Out) Rotate |
| | | | 48-51 | Gobo 4 (Nurons) Rotate |
| | | | 52-55 | Gobo 5 (Swirl) Rotate |
| | | | 56-59 | Gobo 6 (Crossed Bars) Rotate |
| | | | 60-63 | Gobo 7 (On the Rock) Rotate |
| | | | 64-67 | Open - No Gobo |
| | | | 68-71 | Gobo 1 (Night Sky) Rotate with Mega Stepping |
| | | | 72-75 | Gobo 2 (Circle of Ovals) Rotate with Mega Stepping |
| | | | 76-79 | Gobo 3 (Bricked Out) Rotate with Mega Stepping |
| | | | 80-83 | Gobo 4 (Nurons) Rotate with Mega Stepping |
| | | | 84-87 | Gobo 5 (Swirl) Rotate with Mega Stepping |
| | | | 88-91 | Gobo 6 (Crossed Bars) Rotate with Mega Stepping |
| | | | 92-95 | Gobo 7 (On the Rock) Rotate with Mega Stepping |
| | | | 96-99 | Open - No Gobo |
| | | | 100-121 | Gobo 1 (Night Sky) Rotate with Twist Slow >>>> Fast |
| | | | 122-142 | Gobo 2 (Circle of Ovals) Rotate with Twist Slow >>>> Fast |
| | | | 143-163 | Gobo 3 (Bricked Out) Rotate with Twist Slow >>>> Fast |
| | | | 164-184 | Gobo 4 (Nurons) Rotate with Twist Slow >>>> Fast |
| | | | 185-205 | Gobo 5 (Swirl) Rotate with Twist Slow >>>> Fast |
| | | | 206-226 | Gobo 6 (Crossed Bars) Rotate with Twist Slow >>>> Fast |
| 227-247 | Gobo 7 (On the Rock) Rotate with Twist Slow >>>> Fast | | | |
| 248-255 | Open - No Gobo | | | |
| 16 | Gobo 1 Rot/Index High Byte | 32767 | 0 - 65535 | 16-bit control of index and rotation of gobo wheel 1. |
| 17 | Gobo 1 Rot/Index Low Byte | | 0 - 32756 | Rotate Fast to Slow <<< |
| | | | 32757 - 32780 | Rotation STOP |
| | | | 32781 - 65535 | Rotate Slow to Fast >>> |
| 18 | Gobo Wheel 2 (Fixed) | 0 | 0-255 | 8-bit control of Gobo Wheel for movement options see channel 22 |
| | | | 0 | Open - No Gobo |
| | | | 1 | Gobo 1 (Leafy Breakup) |
| | | | 2 | Gobo 2 (Honeycomb) |
| | | | 3 | Gobo 3 (Radial Breakup) |
| | | | 4 | Gobo 4 (Grid) |
| | | | 5 | Gobo 5 (Circle of dots) |
| | | | 6 | Gobo 6 (Punchcard) |
| | | | 7 | Gobo 7 (Vertical Bars) |
| | | | 8 | Gobo 8 (Medium Circle) |
| | | | 9 | Open - No Gobo |
| | | | 10 - 13 | Gobo 1 (Leafy Breakup) Shake Fast >>>> Slow |
| | | | 14 - 34 | Gobo 2 (Honeycomb) Shake Fast >>>> Slow |
| | | | 35 - 55 | Gobo 3 (Radial Breakup) Shake Fast >>>> Slow |
| | | | 56 - 76 | Gobo 4 (Grid) Shake Fast >>>> Slow |
| | | | 77 - 97 | Gobo 5 (Circle of dots) Shake Fast >>>> Slow |
| | | | 98 - 118 | Gobo 6 (Punchcard) Shake Fast >>>> Slow |
| | | | 119 - 139 | Gobo 7 (Vertical bars) Shake Fast >>>> Slow |
| | | | 140 - 160 | Gobo 8 (Medium Circle) Shake Fast >>>> Slow |
| | | | 161-185 | Open - No Gobo |
| 186 - 216 | Gobo Wheel Rotate Clockwise S>>>>F | | | |

TABLE 3. CLONE

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----|---|----------|--|--|
| 18 | Gobo Wheel 2 (Fixed) <i>continued</i> | 0 | 217-220 221-251 252-255 | Stop No Rotation Gobo Wheel Rotate Counter Clockwise S>>>>>F Stop No Rotation |
| 19 | Iris | 0 | 0-255 0 - 200 201 - 255 | Iris size control Iris beam size open to closed Iris pulse slow to fast |
| 20 | Frame 1A | 0 | 0 - 255 | Controls Framing Shutter 1A from Open to Full (DMX 0-255). |
| 21 | Frame 1B | 0 | 0 - 255 | Controls Framing Shutter 1B from Open to Full (DMX 0-255). |
| 22 | Frame 2A | 0 | 0 - 255 | Controls Framing Shutter 2A from Open to Full (DMX 0-255). |
| 23 | Frame 2B | 0 | 0 - 255 | Controls Framing Shutter 2B from Open to Full (DMX 0-255). |
| 24 | Frame 3A | 0 | 0 - 255 | Controls Framing Shutter 3A from Open to Full (DMX 0-255). |
| 25 | Frame 3B | 0 | 0 - 255 | Controls Framing Shutter 3B from Open to Full (DMX 0-255). |
| 26 | Frame 4A | 0 | 0 - 255 | Controls Framing Shutter 4A from Open to Full (DMX 0-255). |
| 27 | Frame 4B | 0 | 0 - 255 | Controls Framing Shutter 4B from Open to Full (DMX 0-255). |
| 28 | Frame Rotate | 128 | 0 - 255 | Controls Framing Shutter mechanism from +/- 90° |
| 29 | Triangular Prism | 0 - 255 | 0 - 255 0 - 5 6 - 10 11 - 15 16 - 20 21 - 255 | Controls Prism mechanism with following values. Open Index Rotate Normal Rotate with Mega Stepping Reserved Values |
| 30 | Prism Index/Rot High Byte | 32767 | 0 - 65535 0 - 32756 | 16-bit control of prism rotation and index. Rotate Fast to Slow <<< |
| 31 | Prism Index/Rot Low Byte | | 32757 - 32780 32781 - 65535 | Rotation STOP Rotate Slow to Fast >>> |
| 32 | Frost | 0 | 0-255 | Linear control of frost mechanism from out (DMX 0) to full in (DMX 255) |
| 33 | Strobe / Shutter | 33 | 0 - 5 6 - 11 12 - 87 88 - 93 94 - 169 170 - 245 246 - 251 252 - 255 | Shutter Closed Shutter Open (Default 33) Strobe Slow>>>>>>>Fast Strobe Open Strobe Random Slow>>>>>>>Fast Strobe Random Sync Slow>>>>>>>Fast Shutter Open Reserved |
| 34 | Programmers Channel | 0 | 0-40 41 - 45 46 - 50 51 - 55 56 - 60 61 - 65 | Functions do not require 3 second DMX rule. mode will change once DMX level is reached Idle Dimming Curve Linear Dimming Curve S-Curve Dimming Curve Square Curve (Default)** Reserved Values Dimmer Snap On |

TABLE 3. CLONE

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|--|----------|-----------|--|
| 34 | Programmers Channel <i>continued</i> | 0 | 66 - 70 | Dimmer Snap Off (Default) |
| | | | 71 - 75 | Reserved Values |
| | | | 76 - 80 | Edge Tracking on |
| | | | 81 - 85 | Edge tracking off (Default) |
| | | | 86 - 90 | Reserved Values |
| | | | 91 - 95 | Color Snap off (Default) |
| | | | 96 - 100 | Color Snap on (de-activates color timing channel) |
| | | | 101 - 105 | Reserved Values |
| | | | 106 - 110 | Reserved Values |
| | | | 111 - 115 | Reserved Values |
| | | | 116 - 120 | Reserved Values |
| | | | 121 - 125 | Reserved Values |
| | | | 126 - 130 | Reserved Values |
| | | | 131 - 135 | Reserved Values |
| | | | 136 - 140 | Reserved Values |
| | | | 141 - 145 | Reserved Values |
| | | | 146 - 150 | Reserved Values |
| | | | 151 - 155 | Reserved Values |
| | | | 156 - 160 | Reserved Values |
| | | | 161 - 165 | Reserved Values |
| 166 - 170 | Reserved Values | | | |
| 171 - 175 | Reserved Values | | | |
| 176 - 255 | Reserved Values | | | |
| 35 | Luminaire Control | 0 | 0 - 255 | Control Channel used for full fixture settings lamp controls. Set discrete value of desired effect then set value to 0 (Idle). |
| | | | 0 - 5 | Idle (Default) |
| | | | 6 - 10 | Full Luminaire ReCal - Also Used to Wake fixture up from shutdown |
| | | | 11 - 15 | Fixture Shutdown |
| | | | 16 - 20 | Reserved Values |
| | | | 21 - 25 | Display - Menu ON |
| | | | 26 - 30 | Display - Menu OFF |
| | | | 31 - 35 | Reserved Values |
| | | | 36 - 40 | Reserved Values |
| | | | 41 - 45 | Reserved Values |
| | | | 46 - 50 | Reserved Values |
| | | | 51 - 55 | Reserved Values |
| | | | 56 - 60 | Reserved Values |
| | | | 61 - 65 | Reserved Values |
| | | | 66 - 70 | Reserved Values |
| | | | 71 - 75 | Reserved Values |
| | | | 76 - 80 | Display On |
| | | | 81 - 85 | Display Off |
| | | | 86 - 90 | Status Check (Turn UI Screen Green if fixture has no Error - Red if Error) |
| | | | 91 - 95 | Reserved Values |
| 96 - 100 | Reserved Values | | | |
| 101 - 105 | Reserved Values | | | |
| 106 - 110 | Boost Mode - Fixture output increase with Higher fan speed | | | |

TABLE 3. CLONE

| DMX | PARAMETER | DEFAULTS | RANGE | DESCRIPTION |
|-----------|---------------------------------------|----------|-----------|--|
| 35 | Luminaire Control <i>continued</i> | 0 | 111 - 115 | Standard Mode - |
| | | | 116 - 120 | Studio Mode - Reduced output with lower fan |
| | | | 121 - 125 | Reserved Values |
| | | | 126 - 130 | Reserved Values |
| | | | 131 - 135 | Reserved Values |
| | | | 136 - 140 | Fan On (Default) (Continuous spin rate) |
| | | | 141 - 145 | Fan Auto (Variable spin rate based on LED temperature) |
| | | | 146 - 150 | Reserved Values |
| | | | 151 - 155 | ReCal Position |
| | | | 156 - 160 | ReCal Color |
| | | | 161 - 165 | ReCal Beam |
| | | | 166 - 170 | ReCal Optics |
| | | | 171-175 | ReCal Gobo |
| | | | 176 - 180 | Reset fixture to default |
| 181 - 255 | Reserved Values | | | |

TABLE 4. COLOR WHEEL

| COLOR SLOT | COLOR | CIE 1931 | | 16-BIT MODE DMX RANGE | CENTER | CLONE MODE DMX STEP | DMX VARIABLE | CENTER |
|------------|-------------|----------|---|-----------------------|--------|---------------------|--------------|--------|
| | | X | Y | | | | | |
| 1 | VL RED | | | 32-63 | 48 | 9 | 48-68 | 58 |
| 2 | Dark Blue | | | 64-95 | 80 | 15 | 69-89 | 79 |
| 3 | Yellow | | | 96-127 | 112 | 21 | 90-110 | 100 |
| 4 | Kelly Green | | | 128-159 | 144 | 27 | 111-131 | 121 |
| 5 | Amber | | | 160-191 | 176 | 33 | 132-152 | 142 |
| 6 | Congo Blue | | | 192-223 | 208 | 39 | 153-173 | 163 |

TABLE 5. CONTROL CHANNEL

| RANGE DMX | ITEMS | DESCRIPTION | POWER CYCLE RULES | RECAL RULES | REST TO DEFAULT FIXTURE | RESET TO DEFAULT UI |
|-----------|--------------------------------|---|-------------------|---------------|-------------------------|---------------------|
| 0 - 255 | Control Channel | Used for full fixture settings lamp controls and miscellaneous modes. Set discrete value of desired effect wait >3 seconds, then set value to 0 (Idle). | | N/A | | |
| 0 - 5 | Idle (Default) | Default value used as return point to activate all control functions | N/A | | | |
| 6 - 10 | Full Luminaire ReCal | Recalibrates all mechanical functions and sensor within the fixture; also used to Wake fixture up from shutdown | N/A | | | |
| 11 - 15 | Fixture Shutdown | Shuts down all fixture output and turns off all fans - fixture is activated by power cycle or ReCal command | Fixture wakes | Fixture wakes | Fixture wakes | Fixture wakes |
| 16 - 20 | Reserved Values | | N/A | | | |
| 21 - 25 | Display - Menu ON | Switches UI display backlight on remotely - Display will Time out from on after 5 mins | N/A | N/A | N/A | N/A |
| 26 - 30 | Display - Menu OFF | | N/A | N/A | N/A | N/A |
| 31 - 35 | Tungsten Dimming On | Remote switches Tungsten Dimming color shift on | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 36 - 40 | Tungsten Dimming Off (Default) | Remote switches Tungsten Dimming color shift off | Hold Setting | Hold Setting | Resets to Default | Resets to Default |

TABLE 5. CONTROL CHANNEL

| RANGE DMX | ITEMS | DESCRIPTION | POWER CYCLE RULES | RECAL RULES | REST TO DEFAULT FIXTURE | RESET TO DEFAULT UI |
|-----------|--|---|-------------------|--------------|-------------------------|---------------------|
| 41 - 45 | Dimming Curve Linear | Selects Linear Dimming Curve Removed if used in programmers channel | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 46 - 50 | Dimming Curve S-Curve | Selects S-Law Dimming Curve; Removed if used in programmers channel | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 51 - 55 | Dimming Curve Square Curve (Default)** | Selects Square -Law Dimming Curve; Removed if used in programmers channel | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 56 - 60 | Reserved Values | | | | | |
| 61 - 65 | Dimmer Snap On | Allows for fastest output changes between levels but reduces smoothness dimming LED; Removed if used in programmers channel | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 66 - 70 | Dimmer Snap Off (Default) | Ensures all fades between output levels remain smooth and flicker free limits fast instant snaps between levels; Removed if used in programmers channel | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 71 - 75 | Reserved Values | | N/A | | | |
| 76 - 80 | Display On | Remote activation of User interface display back light - on for 10 mins | N/A | | | |
| 81 - 85 | Display Off | Display off switches off display before time out | N/A | | | |
| 86 - 90 | Status Check | Activates status check - Green activates and show green for 5 mins if no errors present; Show red if fixture is reporting and error | N/A | | | |
| 91 - 95 | Color Calibration on | Turns Color calibration on for fixture to fixture color matching on all mixed and preset colors between fixtures limits highest output and max saturation on some colors | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 96 - 100 | Color Calibration off (Default) | Turns Color calibration off fixtures may not match fixture to fixture offers highest output and deepest saturation of color | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 101 - 105 | Reserved Values | | N/A | | | |
| 106 - 110 | Boost Mode | Boost mode - LED output boosted to >120% of standard output fan speeds increased manage heat level of LED (may be limited to only run for XXhrs) NC45 - NC55 *Fans can be switched between On (136-140) & Auto (141 - 145) | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 111 - 115 | Standard Mode - Fixture operates at maximum output (Default) | Standard mode - Full LED Output + Full Continuous Fan Spin at top speed (loudest setting) (Fan remain at a constant speed and do not ramp up and down) NC40 *Fans can be switched between On (136-140) & Auto (141 - 145) | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 116 - 120 | Studio Mode - Reduced output with lower fan settings | Studio Mode - Fan speed reduced to appropriate amount to reduce dB levels >10% of full speed + LED @ max output approximately 80% of Standard output at appropriate level to ensure LED work at optimum temperature and output efficiency (fan speed remains at a constant speed and do not ramp up or down) NC35 *Fans can be switched between On (136-140) & Auto (141 - 145) | Hold Setting | Hold Setting | Resets to Default | Resets to Default |

TABLE 5. CONTROL CHANNEL

| RANGE DMX | ITEMS | DESCRIPTION | POWER CYCLE RULES | RECAL RULES | REST TO DEFAULT FIXTURE | RESET TO DEFAULT UI |
|-----------|--------------------------|--|-------------------|--------------|-------------------------|---------------------|
| 121 - 125 | Reserved | | N/A | N/A | N/A | N/A |
| 126 - 130 | Reserved Values | | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 131 - 135 | Reserved Values | | N/A | N/A | N/A | N/A |
| 136 - 140 | Fan On (Default) | Fans run at continuous speed for either Boost or standard mode in isolation to the LED operating temperature | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 141 - 145 | Fan Auto | Fans will reduce / increase speed on demand based on LED operating temperature for either standard or studio mode | Hold Setting | Hold Setting | Resets to Default | Resets to Default |
| 146 - 150 | Reserved Values | | N/A | Hold Setting | Resets to Default | Resets to Default |
| 151 - 155 | ReCal Position | Recalibration of Positions | N/A | Hold Setting | Resets to Default | Resets to Default |
| 156 - 160 | ReCal Color | Recalibration of color system | N/A | Hold Setting | Resets to Default | Resets to Default |
| 161 - 165 | ReCal Beam | Recalibration of all Beam function | N/A | Hold Setting | Resets to Default | Resets to Default |
| 166 - 170 | Recal Optics | Recalibration of optical system | N/A | Hold Setting | Resets to Default | Resets to Default |
| 171 - 175 | Reset fixture to default | Will reset all parameters to default with the exception of the Mx address; fixture mode and Pixel / Zone selection | N/A | N/A | N/A | N/A |
| 176 - 255 | Reserved Values | | N/A | Hold Setting | Resets to Default | Resets to Default |

TABLE 6. PROGRAMMER'S CHANNEL, DEFAULT 0

| DMX | ITEMS | DESCRIPTION | POWER CYCLE RULES | RECAL RULES | REST TO DEFAULT FIXTURE | RESET TO DEFAULT UI | FUNCTION SELECTION VIA UI |
|---------|--|---|-------------------|--------------|-------------------------|---------------------|---------------------------|
| | | Functions do not require 3 second DMX rule. mode will change once DMX level is reached | | | | | |
| 0-40 | Idle | Default channel level | N/A | N/A | | | N/A |
| 41 - 45 | Dimming Curve Linear | Selects Linear Dimming Curve | Hold setting | Hold setting | Resets to default | Resets to default | Yes |
| 46 - 50 | Dimming Curve S-Curve | Selects S-Law Dimming Curve | Hold setting | Hold setting | Resets to default | Resets to default | Yes |
| 51 - 55 | Dimming Curve Square Curve (Default)** | Selects Square -Law Dimming Curve | Hold setting | Hold setting | Resets to default | Resets to default | Yes |
| 56 - 60 | Reserved Values | | | | | | |
| 61 - 65 | Dimmer Snap On | Allows for fastest output changes between levels but reduces smoothness dimming LED | Hold setting | Hold setting | Resets to default | Resets to default | Yes |
| 66 - 70 | Dimmer Snap Off (Default) | Ensures all fades between output levels remain smooth and flicker free limits fast instant snaps between levels | Hold setting | Hold setting | Resets to default | Resets to default | Yes |
| 71 - 75 | Reserved Values | | N/A | | | | N/A |

4 OPERATION



A DMX termination connector is used in this process. Solder a 120 Ω 1/4W resistor between pin 2 (DMX-) and pin 3 (DMX+) into a 5-pin XLR-plug and plug it in the DMX-output of the last unit. A maximum of 32 luminaires can be connected to one DMX512 data link.

Connect the unit together in a "daisy chain" by XLR plug from the output of the unit to the input of the next unit. The cable can not branched or split to a "Y" cable. DMX 512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system. The DMX output and input connectors are pass-through to maintain the DMX circuit, when one of the units' power is disconnected.

Each lighting unit needs to have an address set to receive the data sent by the controller. The address number is between 0-511 (usually 0 & 1 are equal to 1).

The end of the DMX 512 system should be terminated to reduce signal errors.

5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+), Pin 4/Pin 5: Not used.

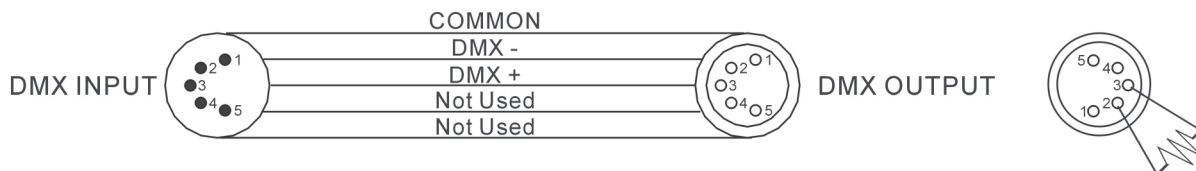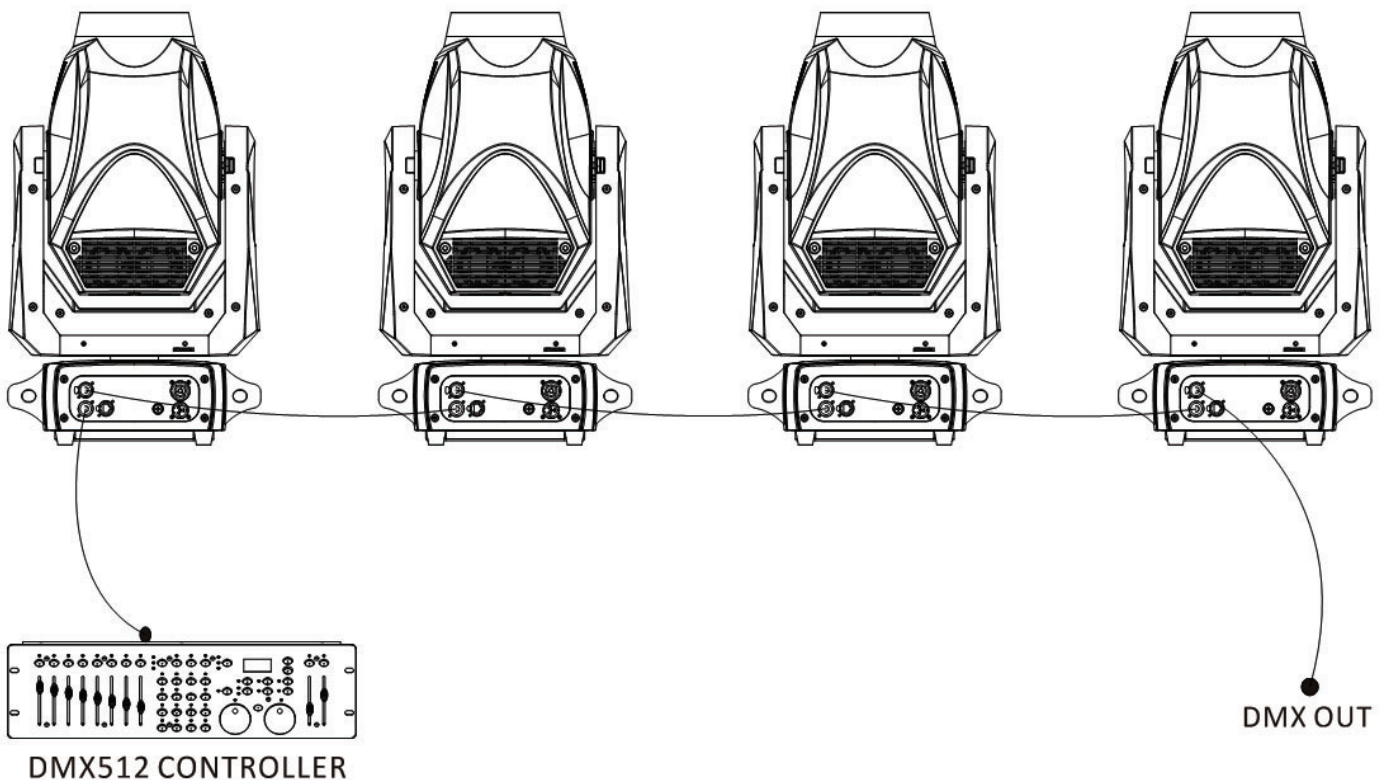

5 MENU SYSTEM

MENU OPERATION


WHAT IS THE MENU SYSTEM?

The menu system is a programmable set of commands used to configure, address, operate, and test the luminaire. The menu system is controlled at the Menu Display available at the enclosure input panel.

CONTROLS OPERATION

The menu system is controlled by [MENU], [ENTER], and four ▲▼ arrow buttons.

The arrows have opposite functions if the luminaire is hung upside down in a hanging orientation due to the automatic orientation feature. In other words, the arrow pointing downward always functions as down/decrease and the arrow pointing upward always functions as up/increase regardless of the luminaire orientation.

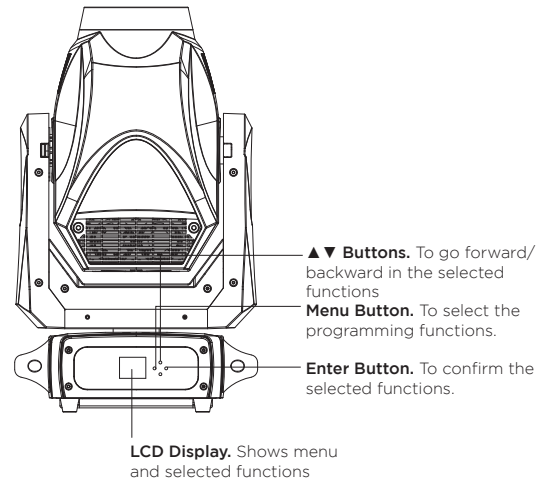

DEFAULT STATE

The menu display's default state during normal operation is to display the DMX address. After 40 seconds of inactivity at the display, it will change to the default state.

After longer periods of inactivity, the menu display will switch to its off state. The default state for this feature is 30 seconds, however, different time lengths can also be programmed.

To program a different time length for menu off feature:

- Step 1. Press [ESC] access the main menu.
- Step 2. Once enabled, the menu will function as normal with only the following sub-menu sections active:
 - Address
 - Configure
 - DMX
 - Fixture
 - Manual Control
 - Test
- Step 3. Press ▲▼ choose the "Configure", and press [ENTER].
- Step 4. Press ▲▼ choose the "Display", and press [ENTER].
- Step 5. Press ▲▼ choose the "On Time", and press [ENTER].
- Step 6. Press ▲▼ choose "30 Sec", "5 Min", "10 Min", "On" when you need.

MENU FUNCTIONS

For easy reference, each possible menu item is listed alphabetically in the first column by its display abbreviation. The second column follows with a definition of the abbreviation and then a third column provides an explanation of its purpose and function.

To select any functions, press the MENU button until the required one is shown on the display. Select the function by the ENTER button and the display will blink. Use the DOWN and UP button to change the mode. Once the required mode has been selected, press the ENTER button to setup or it will automatically return to the main functions without any change after idling one minute. Back to the functions without any change press the MENU button.

TABLE 7. MENU SYSTEM

| LEVEL 1 | LEVEL 2 | LEVEL 3 | LEVEL 4 | LEVEL 5 | LEVEL 6 | DEFAULT |
|------------------|---------------|-------------------|---------------|-----------|-----------|---------------|
| ADDRESS | 001-512 | | | | | (Default 001) |
| CONFIGURE | LED | LED Hours | XXXXXX h | | | |
| | | Reset LED Hour | Are you sure? | | | |
| | | Dimming Curve | Square Law | | | (Default) |
| | | | S Curve | | | |
| | | | Linear | | | |
| | | Dim Snap | Snap On | | | |
| | | | Snap Off | | | (Default) |
| | | Output Mode | Boost | | | |
| | | | Standard | | | (Default) |
| | | | Studio | | | |
| | | Fan Mode | On | | | (Default) |
| | | | Auto | | | |
| | | Refresh rate | 900Hz | | | |
| | | | 910Hz | | | |
| | | | 920Hz | | | |
| | 930Hz | | | | | |
| | 940Hz | | | | | |
| | 950Hz | | | | | |
| | 960Hz | | | | | |
| | 980Hz | | | | | |
| | 990Hz | | | | | |
| | 1000Hz | | | | | |
| | 1500Hz | | | | (Default) | |
| | 2500Hz | | | | | |
| | 4000Hz | | | | | |
| | Movement | Pan Motor | Enable | | | (Default) |
| | | | Disable | | | |
| | | Tilt Motor | Enable | | | (Default) |
| | | | Disable | | | |
| | Display | Miss Orientation? | Up | | | (Default) |
| | | | Down | | | |
| | | On Time | 30 Sec | | | (Default) |
| | | | 5 Min | | | |
| 10 Min | | | | | | |
| Focus Compensate | Disable | | | | | |
| | 5M | | | | | |
| | 10M | | | (Default) | | |
| | 15M | | | | | |
| Reset Defaults | Are you sure? | | | | | |

TABLE 7. MENU SYSTEM

| LEVEL 1 | LEVEL 2 | LEVEL 3 | LEVEL 4 | LEVEL 5 | LEVEL 6 | DEFAULT | |
|--------------------|-----------------|-----------------------------------|---------|-----------------------|---------|---------|------------|
| DMX | Address | 001-512 | | | | | |
| | DMX Mode | 16-bit Enh | | | | | (Default) |
| | | 16-bit | | | | | |
| | | Clone Mode | | | | | |
| | Select Signal | DMX Only | | | | | (Default) |
| | | Art-Net | | On | | | |
| | | | | Off | | | (Default) |
| | Set Artnet | Set Universe | | 0-15 | | | |
| | | Net | | 0-127 | | | |
| | | Sub-Net | | 0-15 | | | |
| | | Ethernet IP | | XXX. XXX. XXX. XXX | | | |
| | | Ethernet Mask IP | | XXX. XXX. XXX. XXX | | | |
| | DMX Fail/No DMX | Hold | | | | | (Default) |
| | | Fade to blackout | | | | | |
| | | Goto Preset | | 1 to 20 | | | |
| | Pan/Tilt | Swap Pan/Tilt | | Off | | | (Default) |
| | | | | On | | | |
| | | Invert Pan | | Off | | | (Default) |
| | | | | On | | | |
| | | Invert Tilt | | Off | | | (Default) |
| | | | | On | | | |
| | Data | Ch 1 - Intensity XXX (Value) | | | | | |
| | | Ch 2 - Intensity Fine XXX (Value) | | | | | |
|All functions | | | | | | | |

TABLE 7. MENU SYSTEM

| LEVEL 1 | LEVEL 2 | LEVEL 3 | LEVEL 4 | LEVEL 5 | LEVEL 6 | DEFAULT | | |
|-----------------|-----------------------|---|-----------------------------|-------------------|-----------------|--------------------|------------|--|
| FIXTURE | Status | (No Errors... or displays a list of errors) | | | | | | |
| | Recal (Fixture) | Are you sure? | | | | | | |
| | Reboot Fixture | Are you sure? | | | | | | |
| | Version | VXXX | | | MM/D/YY | HH:MM | | |
| | Fixture Hours | XXXXXX h | | | | | | |
| | Cross load (Software) | Send | | | | | | |
| | Service | Service Settings | Password access only (2606) | Set Position Cal | Pan | (-128-127) | | |
| | | | | | Tilt | (-128-127) | | |
| | | | | | Re. Pos. Offset | No/Yes | | |
| | | | | | ReCal Position | No/Yes | | |
| | | | | | Color Offset | Cyan | (-128-127) | |
| | | | | | | Yellow | (-128-127) | |
| | | | | | | Magenta | (-128-127) | |
| | | | | | | CTO | (-128-127) | |
| | | | | | | Color Wheel | (-128-127) | |
| | | | | | | Reset Color Offset | No/Yes | |
| | | | | | Gobo Offset | ReCal Color | No/Yes | |
| | | | | | | Gobo1 Wheel | No/Yes | |
| | | | | Gobo1 Rot | | (-128-127) | | |
| | | | | Gobo2 Wheel | | (-128-127) | | |
| | | | | Reset Gobo Offset | | No/Yes | | |
| | | | | Optics Offset | ReCal Gobo | No/Yes | | |
| | | | | | Focus | (-128-127) | | |
| | | | | | Zoom | (-128-127) | | |
| | | | | | Prism | (-128-127) | | |
| | | | | | Prism Rot | (-128-127) | | |
| | | | | | Frost | (0-255) | | |
| | | | | | Re. Opt. Offset | No/Yes | | |
| | | | | Beam Offset | ReCal Optics | No/Yes | | |
| | | | | | Iris | (0-255) | | |
| | | | | | Frame Rot | (-128-127) | | |
| | | | | | Frame 1A | (0-255) | | |
| Frame 1B | | | | | (0-255) | | | |
| Frame 2A | | | | | (0-255) | | | |
| Frame 2B | | | | | (0-255) | | | |
| Frame 3A | | | | | (0-255) | | | |
| Frame 3B | | | | | (0-255) | | | |
| Frame 4A | | | | | (0-255) | | | |
| Frame 4B | (0-255) | | | | | | | |
| Re. Opt. Offset | No/Yes | | | | | | | |
| ReCal Frame | No/Yes | | | | | | | |
| Diagnostics | Fan Check | | | | | | | |
| | LED Temp | | | | | | | |

TABLE 7. MENU SYSTEM

| LEVEL 1 | LEVEL 2 | LEVEL 3 | LEVEL 4 | LEVEL 5 | LEVEL 6 | DEFAULT |
|-----------------------------|----------------------------------|---------------------------------|---------|---------|------------------------|------------------------|
| TEST | All Test | (Run 'ALL TEST') | | | | |
| | Pan/Tilt Test | (Run 'PAN/TILT TEST') | | | | |
| | Test Channel | Intensity | | | | (Run Intensity test) |
| | | Pan | | | | (Run Pan test) |
| | |All functions | | | | |
| | Encoder Pan | XXXXXXXX - Displays Pan Encoder | | | | |
| Encoder Tilt | XXXXXXXX - Displays Tilt Encoder | | | | | |
| *MANUAL/ PRESET* | Preset Playback | Select preset | | | | 1 to 20 |
| | | Intensity | | | | 0 - 255 |
| | User Preset Setting | Intensity | | | | 0 - 255 |
| | | Shutter / Strobe | | | | 0 - 255 |
| | | Pan | | | | 0 - 255 |
| | | Tilt | | | | 0 - 255 |
| | | Cyan | | | | 0 - 255 |
| | | Yellow | | | | 0 - 255 |
| | | Magenta | | | | 0 - 255 |
| | | CTO | | | | 0 - 255 |
| | | Color Wheel | | | | 0 - 255 |
| | | Gobo 1 | | | | 0 - 255 |
| | | Gobo 2 | | | | 0 - 255 |
| | | Prism | | | | 0 - 255 |
| | | Zoom | | | | 0 - 255 |
| | | Focus | | | | 0 - 255 |
| | | Iris | | | | 0 - 255 |
| | | Frost | | | | 0 - 255 |
| | | Frame 1A | | | | 0 - 255 |
| | | Frame 1B | | | | 0 - 255 |
| | | Frame 2A | | | | 0 - 255 |
| | | Frame 2B | | | | 0 - 255 |
| | | Frame 3A | | | | 0 - 255 |
| | | Frame 3B | | | | 0 - 255 |
| | | Frame 4A | | | | 0 - 255 |
| | | Frame 4B | | | | 0 - 255 |
| | Frame Rotate | | | | 0 - 255 | |
| | Store | 1 >>>>>>>>> | 20 | | | Are your sure (Yes/No) |
| Clear | 1 >>>>>>>>> | 20 | | | Are your sure (Yes/No) | |

ADDRESS

To select Address, press the ENTER button to confirm. Use the UP/DOWN button to adjust the address from 001 to 512, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

CONFIGURE

To select Configure, press the ENTER button to confirm, use the UP/DOWN button to select LED, Movement, Display, Focus Compensate or Reset Defaults.

LED

To select LED, press the ENTER button to confirm. Use the UP/DOWN button to select LED Hours, Reset LED Hour, Dimming Curve, Dim Snap, Output Mode, Fan Mode or Refresh Rate, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

LED Hours

Select LED Hours, press the ENTER button to confirm, LED Hours will show on the display, press the MENU button back to exit.

Reset LED Hour

Select Reset LED Hour, press the ENTER button to confirm, Are you sure? will show on the display, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Dimming Curve

To select Dimming Curve, press the ENTER button to confirm. Use the UP/DOWN button to select Square Law, S Curve or Linear, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Dim Snap

To select Dim Snap, press the ENTER button to confirm. Use the UP/DOWN button to select Snap On or Snap Off, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Output Mode

To select Output Mode, press the ENTER button to confirm. Use the UP/DOWN button to select Boost, Standard or Studio, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Fan Mode

To select Fan Mode, press the ENTER button to confirm. Use the UP/DOWN button to select On or Auto, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Refresh Rate

To select Refresh Rate, press the ENTER button to confirm. Use the UP/DOWN button to select 900Hz, 910Hz, 920Hz, 930Hz, 940Hz, 950Hz, 960Hz, 980Hz, 990Hz, 1000Hz, 1500Hz, 2500Hz or 4000Hz, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Movement

To select Movement, press the ENTER button to confirm. Use the UP/DOWN button to select Pan Motor or Tilt Motor, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Pan Motor

To select Pan Motor, press the ENTER button to confirm. Use the UP/DOWN button to select Enable or Disable, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Tilt Motor

To select Tilt Motor, press the ENTER button to confirm. Use the UP/DOWN button to select Enable or Disable, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Display

Select Display, press the ENTER button to confirm. Use the UP/DOWN button to select Miss Orientation? or On Time, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Miss Orientation?

Select Miss Orientation?, press the ENTER button to confirm, Use the UP/DOWN button to select Up or Down, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

On Time

Select On Time, press the ENTER button to confirm, Use the UP/DOWN button to select 30 Sec, 5 Min, 10 Min or On, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Focus Compensate

Select Focus Compensate, press the ENTER button to confirm, Use the UP/DOWN button to select Disable, 5M,

10M or 15M, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Reset Defaults

Select Reset Defaults, press the ENTER button to confirm, Are you sure? will show on the display, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

DMX

To select DMX, press the ENTER button to confirm, use the UP/DOWN button to select Address, DMX Mode, Select Signal, Set Artnet, DMX Fail/No DMX, Pan/Tilt or Data.

Address

To select Address, press the ENTER button to confirm. Use the UP/DOWN button to adjust the address from 001 to 512, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

DMX Mode

To select DMX Mode, press the ENTER button to confirm. Use the UP/DOWN button to select 16-bit Enh, 16-bit or Clone Mode, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Select Signal

To select Select Signal, press the ENTER button to confirm. Use the UP/DOWN button to select DMX Only or Art-Net, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Art-Net

To select Art-Net, press the ENTER button to confirm. Use the UP/DOWN button to select On or Off, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Set Artnet

To select Set Artnet, press the ENTER button to confirm. Use the UP/DOWN button to select Set Universe, Net, Sub-Net, Ethernet IP or Ether Mask IP, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

DMX Fail / No DMX

To select DMX Fail / No DMX press the ENTER button to confirm. Use the UP/DOWN button to select Hold, Fade to blackout or Goto Preset, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Pan/Tilt

To select Pan/Tilt, press the ENTER button to confirm. Use the UP/DOWN button to select Swap Pan/Tilt, Invert Pan or Invert Tilt, press the ENTER button to store. Use the UP/DOWN button to select Off or On, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Data

To select Data, press the ENTER button to confirm. Use the UP/DOWN button to select Ch1-Intensity, Ch2-Intensity Fine orAll functions, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

FIXTURE

To select Fixture, press the ENTER button to confirm, use the UP/DOWN button to select Status, ReCal (Fixture), Reboot Fixture, Version, Fixture Hours, Cross load (Software) or Service.

Status

Select Status, press the ENTER button to confirm, (No Errors... or displays a list of errors) will show on the display, press the MENU button back to exit.

Recal (Fixture)

Select Recal (Fixture), press the ENTER button to confirm, Are you sure? will show on the display, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Reboot Fixture

Select Reboot Fixture, press the ENTER button to confirm, Are you sure? will show on the display, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Version

Select Version, press the ENTER button to confirm, version will show on the display, press the MENU button back to exit.

Fixture Hours

Select Fixture Hours, press the ENTER button to confirm, fixture hours will show on the display, press the MENU button back to exit.

Cross load (Software)

Select Cross load (Software), press the ENTER button to confirm, Send will show on the display, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Service

To select Service, press the ENTER button to confirm. Use the UP/DOWN button to select Service Settings or Diagnostics, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Service Settings

Select Service Settings, press the ENTER button to go into Password access only, press ENTER to key password 2606 to confirm. Use the UP/DOWN button to select Set Position Cal, Color Offset, Gobo Offset, Optics Offset or Beam Offset, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

Set Position Cal

Select Set Position Cal press the ENTER button to confirm. Use the UP/DOWN button to select Pan, Tilt, Re. Pos. Offset or ReCal Position, then use the UP/DOWN button to adjust the value for Pan or Tilt, press the ENTER button to store, the fixture will run as the channel value indicates and to select No or Yes for Re. Pos. Offset or ReCal Position. Press the MENU button back to the last menu or exit menu mode idling one minute.

Color Offset

Select Color Offset press the ENTER button to confirm. Use the UP/DOWN button to select Cyan, Yellow, Magenta, CTO, Color Wheel, Reset Color Offset or ReCal Color, then use the UP/DOWN button to adjust the value for Cyan, Yellow, Magenta, CTO or Color Wheel, press the ENTER button to store, the fixture will run as the channel value indicates and to select No or Yes for Reset Color Offset or ReCal Color. Press the MENU button back to the last menu or exit menu mode idling one minute.

Gobo Offset

Select Gobo Offset press the ENTER button to confirm. Use the UP/DOWN button to select Gobo 1 Wheel, Gobo 1 Rot, Gobo2 Wheel, Reset Gobo Offset or ReCal Gobo, then use the UP/DOWN button to adjust the value for Gobo 1 Wheel, Gobo 1 Rot or Gobo2 Wheel, press the ENTER button to store, the fixture will run as the channel value indicates and to select No or Yes for Reset Gobo Offset or ReCal Gobo. Press the MENU button back to the last menu or exit menu mode idling one minute.

Optics Offset

Select Optics Offset press the ENTER button to confirm. Use the UP/DOWN button to select Focus, Zoom, Prism, Prism Rot, Frost, Re. Opt. Offset or ReCal Optics, then use the UP/DOWN button to adjust the value for Focus, Zoom, Prism, Prism Rot or Frost, press the ENTER button to store, the fixture will run as the channel value indicates and to select No or Yes for Re. Opt. Offset or ReCal Optics. Press the MENU button back to the last menu or exit menu mode idling one minute.

Beam Offset

Select Beam Offset press the ENTER button to confirm. Use the UP/DOWN button to select Iris, Frame Rot, Frame 1A, Frame 1B, Frame 2A, Frame 2B, Frame 3A, Frame 3B, Frame 4A, Frame 4B, Re. Opt. Offset or ReCal Frame, then use the UP/DOWN button to adjust the value for Iris, Frame Rot, Frame 1A, Frame 1B, Frame 2A, Frame 2B, Frame 3A, Frame 3B, Frame 4A or Frame 4B, press the ENTER button to store, the fixture will run as the channel value indicates and to select No or Yes for Re. Opt. Offset or ReCal Frame. Press the MENU button back to the last menu or exit menu mode idling one minute.

Diagnostics

To select Diagnostics, press the ENTER button to confirm. Use the UP/DOWN button to select Fan Check or LED Temp, press the ENTER button to store. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

TEST

Enter menu mode, select Test, press the ENTER button to confirm, use the UP/DOWN button to select All Test, Pan/Tilt Test, Test Channel, Encoder Pan or Encoder Tilt.

All Test

Select All Test, press the ENTER button to confirm, the unit will run all test. Press the MENU button back to the last menu or exit menu mode after auto test.

Pan/Tilt Test

Select Pan/Tilt Test, press the ENTER button to confirm, the unit will run pan/tilt test. Press the MENU button back to the last menu or exit menu mode after auto test.

Test Channel

To select Test Channel, press the ENTER button to confirm, use the UP/DOWN button to select channel Intensity, Pan or ...All functions, press the ENTER button to confirm, then use the UP/DOWN button to adjust the value, press the ENTER button to store, the fixture will run as the channel value indicates. Press the MENU button back to the last menu or exit menu mode idling one minute.

Encoder Pan

Select Encoder Pan, press the ENTER button to confirm, Displays Pan Encoder will show on the display. Press the MENU button back to the last menu or exit menu mode after auto test.

Encoder Tilt

Select Encoder Tilt, press the ENTER button to confirm, Displays Tilt Encoder will show on the display. Press the MENU button back to the last menu or exit menu mode after auto test.

MANUAL/PRESET

Enter menu mode, select *Manual/Presets* press the ENTER button to confirm, use the UP/DOWN button to select Preset Playback or User Preset Setting.

Preset Playback

Select Preset Playback, press the ENTER button to confirm, use the UP/DOWN button to select Select preset or Intensity. Press the MENU button back to the last menu or let the unit idle one minute to exit menu mode.

User Preset Setting

Select User Preset Setting, press the ENTER button to confirm, use the UP/DOWN button to select channel Intensity, Shutter/Strobe, Pan, Tilt, Cyan, Yellow, Magenta, CTO, Color Wheel, Gobo 1, Gobo 2, Prism, Zoom, Focus, Iris, Frost, Frame 1A, Frame 1B, Frame 2A, Frame 2B, Frame 3A, Frame 3B, Frame 4A, Frame 4B, Frame Rotate, Store or Clear, press the ENTER button to confirm, then use the UP/DOWN button to adjust the value for Intensity, Shutter/Strobe, Pan, Tilt, Cyan, Yellow, Magenta, CTO, Color Wheel, Gobo 1, Gobo 2, Prism, Zoom, Focus, Iris, Frost, Frame 1A, Frame 1B, Frame 2A, Frame 2B, Frame 3A, Frame 3B, Frame 4A, Frame 4B, Frame Rotate, press the ENTER button to store, the fixture will run as the channel value indicates, and to store or clear 1 to 20 preset for Store or Clear, press ENTER button and Are your sure (Yes/No) will show in the display. Press the MENU button back to the last menu or exit menu mode idling one minute.

APPENDIX A

CARE AND MAINTENANCE

WARNING: All maintenance procedures are to be performed with power disconnected from the luminaire.

TROUBLESHOOTING

The following are a few common problems that may occur during operation with suggestions for correcting the issue.

The fixture does not work - no output and the fan does not work.

1. Check the connection of power cord and main fuse.
2. Measure the mains voltage on the main connector.

The fixture does not respond to DMX controller

1. DMX LED should be on. If not, check DMX connectors, cables to see if linked properly.
2. If the DMX LED is ON and no response to the channel, check the address settings and DMX polarity.
3. When there is intermittent DMX signal problems, check the connector pins, PCB or the previous one.
4. Try to use another DMX controller.
5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

FIXTURE CLEANING

Cleaning must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates - damp, smoky or particularly dirty surroundings cause greater accumulation of dirt on the fixture's optics.

- Clean with soft cloth using glass cleaning fluid.
- Allow parts to fully dry before use.
- Clean external optics at least every 30 days.

HOW TO OBTAIN WARRANTY SERVICE

A copy of the Vari-Lite Limited Warranty was included in the shipping package for this Vari-Lite product.

To obtain warranty service, please contact customer service at 1-214-647-7880, or entertainment.service@signify.com and request a Return Material Authorization (RMA) for warranty service. You will need to provide the model and serial number of the item being returned, a description of the problem or failure and the name of the registered user or organization. If available, you should have your sales invoice to establish the date of sale as the beginning of the warranty period. Once you obtain the RMA, pack the unit in a secure shipping container or in its original packing box. Be sure to clearly indicate the RMA number on all packing lists, correspondence, and shipping labels. If available, please include a copy of your invoice (as proof of purchase) in the shipping container.

With the RMA number written legibly on or near the shipping address label, return the unit, freight prepaid, to:

Vari-Lite

Attention: Warranty Service (RMA# _____)

10911 Petal Street

Dallas, Texas 75238

USA

As stated in the warranty, it is required that the shipment be insured and FOB our service center.

IMPORTANT! When returning products to Vari-Lite for repairs (warranty or out-of--warranty) from a country other than the USA, "Strand Lighting LLC", must appear in the address block as the Importer of Record (IOR) on all shipping documentation, Commercial Invoices, etc. This must be done in order to clear customs in a timely manner and prevent returns.

COMPLIANCE

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when this equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with Vari-Lite system, service, and safety guidelines, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

DECLARATION OF CONFORMITY

We declare, under our sole responsibility, that this product complies with the relevant clauses of the following standards and harmonized documents:

SAFETY

EN 60598-1
EN 60598-2-17
EN 62471

EMC

EN 55015
EN 61000-3-2
EN 61000-3-3
CISPR15
EN 61547

ROHS

EN 50581

We certify that the product conforms to the protection requirements of council directives: Low Voltage Directive 2014/35/EU, 2014/30/EU (EMC), and Restriction of the use of certain Hazardous Substances in electrical and electronic equipment Directive (RoHS), 2015/863. Equipment referred to in this declaration of conformity was first manufactured in 2017 in compliance with these standards.

CUSTOMER SERVICE

If you have questions regarding this product, please contact Customer Service at +1-214-647-7880 or via e-mail at entertainment.service@signify.

LIMITED 2-YEAR WARRANTY

Vari-Lite offers a two-year limited warranty on its control products against defects in materials or workmanship from the date of delivery. A copy of Vari-Lite two-year limited warranty containing specific terms and conditions can be obtained from the Vari-Lite website at www.vari-lite.com or by contacting your local Vari-Lite office.

SAFETY WARNINGS AND NOTICES

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- For indoor, dry locations only. Do not use outdoors. Exposure to rain or moisture may damage fixture unless it is suitably IP rated.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Not for residential use. Do not use this equipment for other than intended use.
- Refer service to qualified personnel. This fixture contains no user serviceable parts.
- Prior to first use, carefully inspect unit for damage from shipping.
- Installation and operation to be performed by qualified personnel only.
- Use safety tether when mounting.
- Install only in locations with adequate ventilation of at least 50cm clearance from adjacent surfaces.
- Note distance requirement(s) from combustible materials or illuminated objects. Do not mount near gas or electric heaters.
- Ensure that ventilation slots are not blocked.
- Ensure that the voltage and frequency of the power supply match the power requirements of the fixture.
- The fixture must be earthed/grounded to the appropriate conductor.
- Do not operate fixture outside the ambient temperature range of -5 to 45°C.
- Do not connect the fixture to any dimmer pack.
- New fixtures may emit a chemical odor due to the manufacturing process. This odor will dissipate over time.
- Prior to each use, carefully inspect power cables and replace any damaged cables.
- Exterior surfaces of the fixture are hot during operation. Take appropriate precautions.
- Power down the fixture when not in use. Continuous use of the fixture may shorten the lifespan.
- Clean fixture regularly, particularly when working in a dusty environment.
- Never touch power cables or wires while the fixture is powered on.
- Avoid entangling power wires with other cables.
- In the event of a serious operating problem, immediately discontinue using the fixture.
- Never turn on and off the unit time after time.
- The housing, lenses, and/or the ultraviolet filter must be replaced if they are damaged.
- Disconnect mains power if the fixture is not used for a long time.
- Original packing materials can be reused for transporting the fixture.
- Do not look directly at the light beam while the fixture is on.

SAVE THESE INSTRUCTIONS.

WARNING: Refer to National Electrical Code® and local codes for cable specifications. Failure to use proper cable can result in damage to equipment or danger to personnel.



AMERICAS

10911 Petal Street
Dallas, TX 75235
Tel: +1 214-647-7880
Fax: +1 214-647-8039

ASIA

Unit C, 14/F, Roxy Industry Centre
41-49 Kwai Cheong Road
Kwai Chung, Kwai Tsing
Hong Kong
Tel: +852 2796 9786
Fax: +852 2798 6546

Room 1201, Freetown Tower D
E 3rd Ring Rd S, 58
Chaoyang Qu
Beijing Shi, China
Tel: +8610-58674776
Fax: +8610-58674775

B-1-27, Dataran Cascades, No. 13A
Jalan PJU 5/1
Kota Damansara PJU 5
47810 Petaling Jaya
Selangor, Malaysia
Tel: +60 3-7611 7302
Fax: +60 3-7629 4192

EUROPE

Rondweg Zuid 85
Winterswijk 7102 JD
Netherlands
Tel: +31 543-542516
Fax: +31 543-542513

24 Sovereign Park
Coronation Road
Park Royal, London
NW10 7QP
United Kingdom
Tel: +44 020 8965 3209

OCEANIA

14H Vega Place
Rosedale
Auckland 0632
New Zealand
Tel: +64 9-481-0100



© 2019 Signify Holding. All rights reserved.

All trademarks are owned by Signify Holding or their respective owners. The information provided herein is subject to change, without notice. Signify does not give any representation or warranty as to the accuracy or completeness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. Data subject to change.

VL800 EVENTPROFILE USER MANUAL

DOCUMENT NUMBER: 91200545005

VERSION DATE: FEBRUARY 27 2020